

Part #	Description	01	02	03	61	70	71	82	90	92	92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98	99	Notes
(10)0510	Bolt																		97	98		
(10)0515	Bolt				61	70	71															
(10)0525	Bolt					70	71												97	98		
(10)0610	Bolt		02	03	61	70																99
(10)0612	Bolt		02	03	61	70							92C/96			94	94A	95				99
(10)0612	Electric horn bolt							90														
(10)0612	Front fender bolt								92	92A/B												
(10)0612	Front fender rubber flap bolt							90	92	92A/B	92B+											
(10)0612	Front fender stay bolt								92	92A/B												
(10)0612	Horn bolt								92	92A/B	92B+					94						
(10)0612	Main switch bolt								92	92A/B	92B+					94						
(10)0612	Rear mud flap bolt							90														
(10)0612	Side number plate bracket bolt													93	93A/B							
(10)0614	Bolt	01	02	03		70	71				92B+	92C/96		93A/B	94	94A	95	97	98	99		
(10)0614	Bolt (cover)							82														
(10)0614	Fender rear / bolt								92		92B+			93								
(10)0614	Front fender bolt								90					93	93A/B							
(10)0614	Front fender stay bolt								90					93	93A/B							
(10)0614	Main switch bolt								90													
(10)0614	Number plate bolt													93	93A/B							
(10)0614	Rear fender bolt										92A/B											
(10)0614	Tail and stop lamp bolt								92													
(10)0614	Tail and stop light bolt										92A/B	92B+										
(10)0615	Bolt				61	70																
(10)0616	Bolt	01	02	03		70	71	82				92B+	92C/96		93A/B	94	94A	95	97	98	99	
(10)0616	Bolt (fender)							82														
(10)0616	Bolt (front)	01											92C/96						97	98	99	
(10)0616	Fender rear / bolt								90					93								
(10)0616	Front fender stay bolt													93	93A/B							
(10)0616	Fuel tank bolt (front)								90	92	92A/B	92B+		93		94	94A	95				
(10)0616	License plate bracket bolt								90													
(10)0616	Bolt							82														
(10)0618	Bolt	01	02		61	70	71											95	97	98	99	
(10)0620	Bolt	01	02	03	61	70	71	82				92B+	92C/96						97	98	99	
(10)0620	Bolt (body)							82														
(10)0620	Bolt (CDI unit)					70																
(10)0620	Bolt (ignition coil)	01	02	03	61			82	92	92A/B						94	94A	95				99
(10)0622	Bolt					70	71												97	98		
(10)0622	Foot change lever bolt								90	92	92A/B	92B+	92C/96	93	93A/B	94	94A	95				
(10)0622	Kick crank bolt								90	92	92A/B	92B+	92C/96	93	93A/B	94	94A	95				
(10)0625	Bolt	01	02	03	61	70	71	82				92B+	92C/96			94	94A	95	97	98	99	
(10)0625	Brake lever housing bolt								90	92	92A/B			93	93A/B							
(10)0625	Chain guard bolt															94						
(10)0625	Clutch lever housing bolt								90	92	92A/B			93	93A/B							
(10)0625	Front fender stay bolt													93	93A/B							
(10)0625	Tool box band bolt								90	92	92A/B	92B+										
(10)0628	Bolt	01	02	03	61	70	71	82				92B+	92C/96		93A/B	94	94A	95	97	98	99	
(10)0628	Cam lever bolt															94	94A					
(10)0630	Bolt		02	03	61																	99
(10)0630	Tool box clip bolt															94	94A					
(10)0632	Bolt	01	02	03	61	70	71															99
(10)0635	Bolt					70	71															
(10)0638	Bolt														93A/B							
(10)0638	Ignition coil bracket bolt													93								
(10)0640	Bolt				61		71	82														
(10)0645	Chain guard bolt													93	93A/B							
(10)0650	Air cleaner bolt								90													
(10)0650	Chain guard bolt								90	92	92A/B	92B+										
(10)0660	Bolt					70	71															
(10)0670	Bolt					70	71															
(10)0685	Battery bolt								92	92A/B	92B+											
(10)0810	Bolt	01	02									92B+	92C/96			94	94A	95	97	98	99	
(10)08100	Air cleaner bolt													93								
(10)08100	Bolt												92C/96		93A/B			95	97			
(10)08100	Engine bolt								90	92	92A/B	92B+		93	93A/B	94	94A					
(10)08100	Fuel tank bolt (rear)								90	92	92A/B	92B+		93								

(10)0812	Bolt	01	02		61	70	71					92B+	92C/96	93	93A/B	94	94A	95	97	98	99	
(10)0812	Drain plug	01	02	03				82	90	92		92B+	92C/96	93	93A/B	94	94A	95	97	98	99	
(10)0812	Front backing plate stay bolt													93	93A/B							
(10)0814	Front fender stay bolt											92A/B										
(10)0816	Bolt	01	02	03				82				92B+	92C/96			94	94A	95				99
(10)0816	Muffler rear bolt									92	92A/B	92B+				94						
(10)0816	Rear carrier rack bolt								90	92	92A/B	92B+										
(10)0816	Bolt							82														
(10)0818	Bolt	01	02	03	61	70	71	82					92C/96				94A	95	97	98	99	
(10)0818	Bolt (skid plate front)							82														
(10)0818	Chain guard bolt															94						
(10)0818	Rear carrier rack bolt															94	94A					
(10)0818	Saddle bolt															94	94A					
(10)0820	Bolt	01	02	03	61	70	71	82											97	98	99	
(10)0820	Chain guide bolt								90	92	92A/B	92B+		93	93A/B							
(10)0820	Headlamp bracket bolt										92A/B											
(10)0820	Saddle bolt									92	92A/B	92B+		93								
(10)0825	Bolt				61		71										94	94A				99
(10)0825	Rear sprocket bolt								90													
(10)0825S	Bolt							82														
(10)0828	Fork outer tube pinch bolt														93	93A/B						
(10)0828iso	Fork outer tube pinch bolt											92A/B										
(10)0830	Bolt							82														
(10)0830	Pinch bolt (with spring washer)																					99
(10)0830	Rear carrier rack bolt									92	92A/B	92B+										
(10)0830S	Fork outer tube pinch bolt (with spring washer)	01	02										92C/96			94	94A	95	97	98		
(10)0835	Bolt					70																
(10)0835	Bolt (upper)			03	61	70	71															
(10)0835	Fork outer tube pinch bolt											92B+										
(10)0835	Handle bar holder bolt								90													
(10)0836S45	Bolt (inner tube)			03	61	70	71															
(10)0840	Bolt	01	02	03															97	98	99	
(10)0845	Bolt				61	70												94A				
(10)0848	Bolt (upper rear)			03	61	70	71															
(10)0850	Bolt																	94A				
(10)0850	Chain guard bolt													93	93A/B							
(10)0855	Bolt					70																
(10)0870	Air cleaner bolt														93							
(10)0870	Battery bracket bolt								90	92	92A/B	92B+				94	94A					
(10)0870	Bolt	01	02	03	61	70	71						92C/96		93A/B	94	94A	95				99
(10)0870	Chain guard bolt															94						
(10)0870	Rear backing plate stay bolt															94	94A					
(10)0880	Bolt	01	02	03															95			99
(10)0885	Bolt	01	02	03	61															97	98	99
(10)0885	Bolt (rear)	01											92C/96									
(10)0885	Fuel tank bolt (rear)															94	94A	95				
(10)0890	Bolt				61																	
(10)1020	Bolt (M10 - P1.25)		02	03	61	70																99
(10)1020	Headlight body bolt											92B+				94	94A					
(10)1020	Rear overlay sprocket bolt								90													
(10)1025	Bolt	01	02										92C/96			94	94A	95	97	98	99	
(10)1025	Foot rest frame bolt								90	92					93							
(10)1025	Foot rest stay bolt										92A/B	92B+			93A/B							
(10)1025	Headlamp body bolt								90	92												
(10)1030	Bolt	01	02	03																97	98	99
(10)1035	Bolt			03		70	71															
(10)1060	Bolt (M10 - P1.25)					70	71															
(11)0825	Fork outer tube pinch bolt									92												
(11)0835	Bolt	01	02	03	61	70	71	82					92C/96	93	93A/B					97	98	99
(11)0835	Foot rest bolt					70	71															
(11)0835	Handle bar holder bolt									92												
(11)0840	Bolt	01	02										92B+	92C/96		94	94A	95	97	98	99	
(11)0840	Handle bar holder bolt											92A/B										
(11)0840	Handle plate bolt											92B+				94	94A					
(11)0842	Handle plate bolt											92A/B			93	93A/B						
(11)1022	Bolt												92C/96			94	94A	95				
(11)1022	Side stand bolt								90	92	92A/B	92B+		93	93A/B							

































































938706	Fork packing tube drain	01	02	03	61	70	71					92B+	92C/96	93	93A/B	94	94A	95	97	98	99		
938707	Fork inner tube																						
938708	Sliding bushing											92A/B	92B+	92C/96	93	93A/B	94	94A	95				
938709	Dust seal	01	02									92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98	99	
938710	Fork nut O ring seal	01	02									92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98		
938711	Fork outer nut	01	02									92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98	99	
938712	Fork inner tube snap ring	01	02														94	94A	95	97	98	99	
938713	Fork oil seal	01	02									92A/B	92B+	92C/96			94	94A	95	97	98	99	
938715	Fork inner tube spring											92A/B			93	93A/B							
938717	Fork inner tube cap O ring seal	01	02									92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98	99	
938721	Fork inner tube cap														93	93A/B							
938721A	Fork inner tube cap	01	02														94	94A	95	97	98	99	
938722	Fork inner tube cap washer											92A/B			93	93A/B							
938727	Handle bar holder	01	02					82				92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98	99	
938730	Fender - front														93	93A/B							
938735	Front fender stay																						
938736	Rubber seat					70	71	82															
938737	Front backing plate stay							82				92A/B	92B+	92C/96	93	93A/B	94	94A	95	97	98		
938740	Handle bar											92A/B	92B+		93	93A/B							
938750	Front fork assembly																						
938750A	Front fork assembly													92C/96			94	94A	95				
938751	Fork outer tube (right)																94	94A	95				
938752	Fork outer tube (left)																94	94A	95				
938753A	Fork inner tube																94	94A	95				
938754	Fork cylinder complete																94	94A	95				
938755	Steering fork bracket	01	02														94	94A	95	97	98	99	
938756	Fork tube inner / spring																94	94A	95				
938757	Fork spring guide	01	02														94	94A	95	97	98	99	
938758	Spacer fork (bottom)																94	94A	95				
938759A	Fork spacer (top)																94	94A	95				
938760	Cable guide (top)	01	02														94	94A	95	97	98	99	
938761	Front brake cable guide (bottom)																94	94A	95				
938762	Fork packing	01	02														94	94A	95	97	98	99	
938763	Drain plug (M4)	01	02	03	61	70	71										94	94A	95	97	98	99	
938950	Cable - throttle cable assembly														93	93A/B							
938952	Throttle cable spring											92A/B											99
939000	Fuel tank														93								
939022	Saddle											92A/B	92B+		93								
939022C	Saddle cover (reproduction)									92					93								
939110	Foot rest stay																						
939111	Foot rest return spring																						
939112	Foot rest bolt																94	94A	95				
939113	Foot rest nut (M8)	01	02	03	61			82									94	94A	95	97	98	99	
939122	Side stand																94	94A	95				
939126	Swing arm																						
939126A	Swing arm																						
939130	Rear shock absorber assembly																						
939136	Rubber bushing (bottom)							71												97	98		
939136	Rubber bushing (top)																94	94A	95				99
939136	Shock absorber rubber bushing (top)	01	02																				
939137	Rubber bushing (bottom)	01	02														94	94A	95				99
939137	Rubber bushing (top & bottom)																						
939137	Rubber bushing (top)																				97	98	
939145A	Chain adjuster assembly	01	02	03	61												94	94A	95	97	98	99	
939146	Chain adjuster lock plate							82									94	94A	95				
939155	Chain guard																						
939190	Exhaust system assembly HU type assembly																						
939191	Muffler HU type																						
939192	Exhaust joint																						
939193	Exhaust bracket																						
939194	Exhaust spring																						
939201	Tire Nitto (3.00 x 19)																						
939202	Tire Nitto (3.50 x 18)																						
939203	Tire tube (3.00 x 19)																						
939204	Tire tube (3.00 x 18)											92A/B											
939204	Tire tube (3.50 x 18)											92A/B											
939205	Tube protector (19")	01																					99































